
### POP OUT IRONING BOARD-LEFT


# nikpoľ

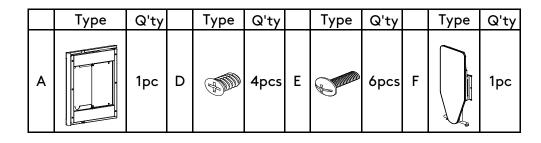


Step 1: Pull-out the mechanism and swivel.

Step 2: Attach to partition using 4 euro screws(D), Top screw must be between 37.8" from the floor.

Step 3: Screw Ironing Board(F) to mechanism(A) using 6 machine screws(E).

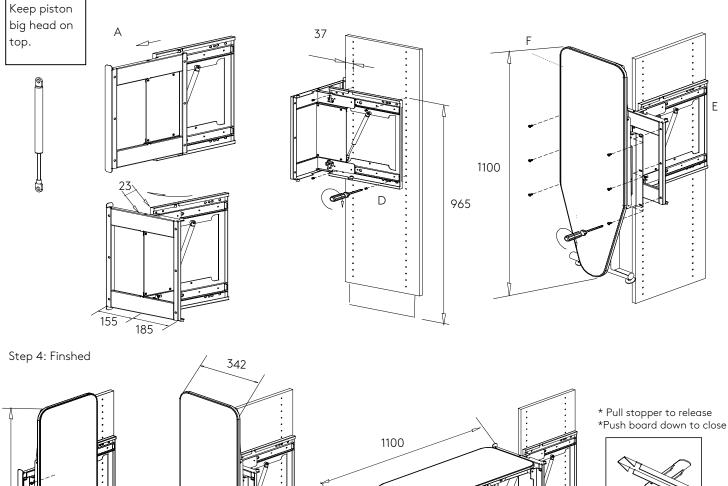

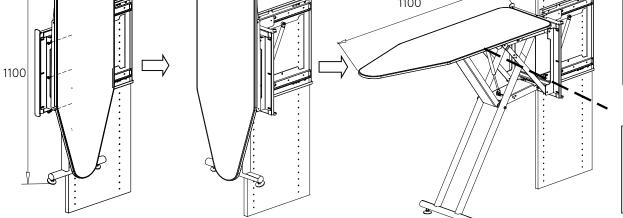

### Suit 300mm wide module

### POP OUT IRONING BOARD-RIGHT

## nikpol Type Q'ty Type O'ty Type O'ty


	Туре	Q'ty									
A		1рс	D		4pcs	E		6pcs	F		1pc

Step 1: Pull-out the mechanism and swivel.

Г

Step 2: Attach to partition using 4 euro screws(D), Top screw must be between 37.8" from the floor.


Step 3: Screw Ironing Board(F) to mechanism(A) using 6 machine screws(E).

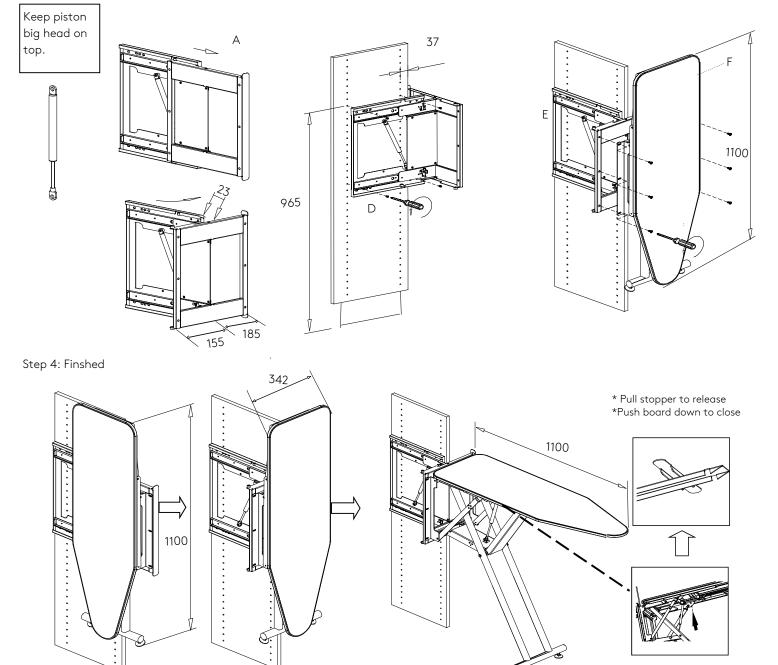

#### Suit 300mm wide module

## POP OUT IRONING BOARD

# nikpoľ

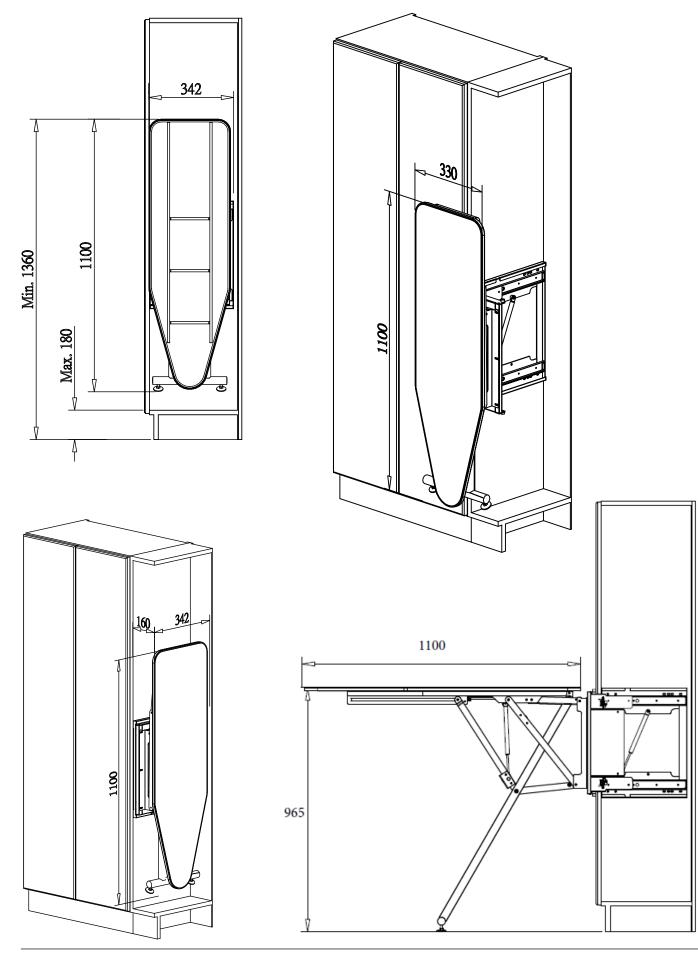

Head Office (VIC)QLD6-12 Fairchild Street19 William Farrior PlaceHeatherton VIC 3202Eagle Farm QLD 4009

Tel 1300 645 765 Web www.nikpol.com.au Email sales@nikpol.com.au